 
 




REX[®] Quick Reference Guide

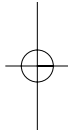

Xircom

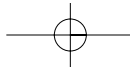

Use the following "quick start" information to get to know your REX. For further information, refer to your REX User's Guide and to the TrueSync Desktop and TrueSync Plus for REX User's Guide (desktop.pdf) on your REX CD-ROM.

Note: Before starting REX, see "Installing New Batteries" for battery installation instructions.

This document provides the following information:

- Using REX
- Key Description
- Getting Connected
- Installing New Batteries

Using REX

Turn on the REX card

- To turn on the REX card, press any of the six control keys.
- To turn off the REX card, hold down the Home key for a few seconds at the Home screen.



Hold down the Home key to turn off the REX card.

Home

- The Home screen shows the different modules in your REX: Calendar, Contacts, To Do List, Memos, Time Zones, and Preferences. The time in the Status Bar reflects the active time. See the Time Zones section for details.



Use the Home screen to select the different modules, or to change or view your preferences or time.

- Use the Up and Down keys to highlight the module that you want, and then press the Select key.

Calendar

- Use the Calendar to view, modify, or add to your schedule.

Contacts

- Use the Contacts module to check, modify, or add to your Contacts.

Memos

- Use the Memos module to read your notes. You can also create QuickNotes, and even append to them.

To Do

- Use the To Do module to recall, modify, add to, or check off your To Do List items. The two-way synchronization feature in TrueSync Desktop lets you synchronize from your REX card to your desktop application, automatically updating your To Do lists.

Time Zones

- Use the Time Zones module for staying on time when you are traveling, keeping track of events in other parts of the world, and even setting a daily alarm.







Preferences

- Use the Preferences module to change options such as the key clicks, date display format, and alarm sounds.



Key Description

Your REX card has six keys that let you select and view information. The basic uses for each key are described in the table below. In addition, when you are entering data, each key may have additional functions.

ICON	NAME	DESCRIPTION
	Home	Press the Home key to return to the Home screen from any other screen.
	View	Press the View key to see a menu of current options.
	Edit	Press the Edit key to move into and out of Edit mode
	Select	Press the Select key to choose an option, just like the Enter key on your computer.
	Up/Left	Press the Up/Left key to scroll or move the highlight through a list or screen.
	Down/Right	Press the Down/Right key to scroll or move the highlight through a list or screen.



Getting Connected

You can synchronize with either a PC Card slot or the Docking Station.

To connect using a PC Card slot:

1. Slide the REX card into a PC Card slot on your computer.
2. You should hear a connection tone, or see a PC Card icon on the Windows taskbar.



Note: You can enable or disable the tone and icon using the PC card icon in the Windows Control Panel.


3. To remove the card, press the Eject button on the PC card slot. Depending on your system, you may also be able to remove the REX card by right-clicking the PC card icon on the Taskbar, choosing the REX card from the list, and clicking Eject.



To connect using the Docking Station:

If your computer does not have a Type II PC card slot, you will need to connect the Docking Station to a serial communications (COM) port on your computer. The procedure is outlined below. For more details including battery installation instructions, refer to "Using the Docking Station" Section 6 in your REX User's Guide.

1. Connect your Docking Station to a serial communications (COM) port on your computer.
2. With its screen facing you, align the REX card with the card slot in the Docking Station and carefully slide the REX card into the slot until you hear the connection tone. Do not force the REX card into the slot. When the REX card is inserted correctly, Ready will appear on the REX screen.

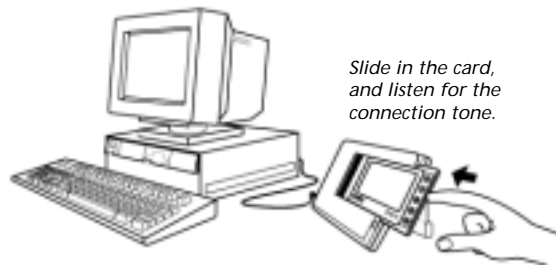


- To remove the card, press the Eject button under the card slot.

Installing New Batteries

To install new batteries:

1. Turn over the REX card.
2. Insert the tip of a paper clip into the small hole on one of the battery compartment doors.
3. Gently press the battery compartment door towards its hinge and then push outward to open the door.

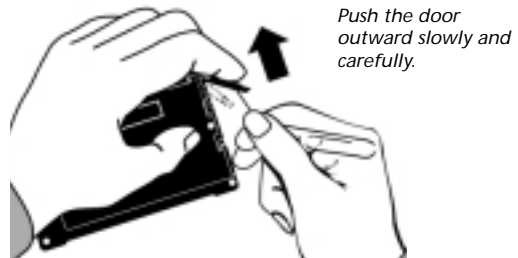

4. Insert each new battery, with the positive (+) side facing the front of the REX card.
5. Carefully close the battery compartment door until it snaps shut.



Worldwide Customer Support

Xircom, Inc.

Thousand Oaks, California
(805) 376-9200 Customer Support
(805) 376-9100 Fax
rexcs@xircom.com E-mail

Xircom Asia Pacific (Pte) Ltd.

Singapore
+65 732 2245 Customer Support
+65 732 5002 Fax
asiats@xircom.com E-mail

Australia/New Zealand

+61(0)2 8923 7090 Customer Support
+61(0)2 8923 7099 Fax
aunzts@xircom.com E-mail

Xircom Europe N.V.

Kontich, Belgium
+32(0)70 233 307 English Language Customer Support
+32(0)70 233 852 Dutch Language Customer Support
+32(0)70 233 851 French Language Customer Support
+32(0)70 233 850 German Language Customer Support
+32(0)70 233 376 Italian Language Customer Support
+32(0)70 233 306 Fax
eurots@xircom.com E-mail

Xircom Japan KK

Tokyo
+81(0)3 3407 1900 Customer Support
+81(0)3 3407 0180 Fax
japan_ts@xircom.com E-mail